


Splash Block Instructions


Before installation of the Splash Block, or any rain diverting accessory, make sure the grade around the foundation slopes away from the house. There should be a 6 inch fall in the first 10 feet from the house.

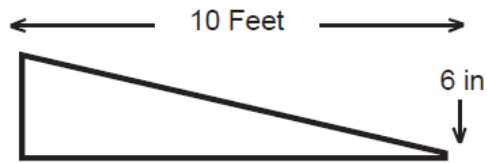

Patent-pending cut-out to allow for fitment of downspout with low clearance of elbow



Water directing chevron pattern reduces washout

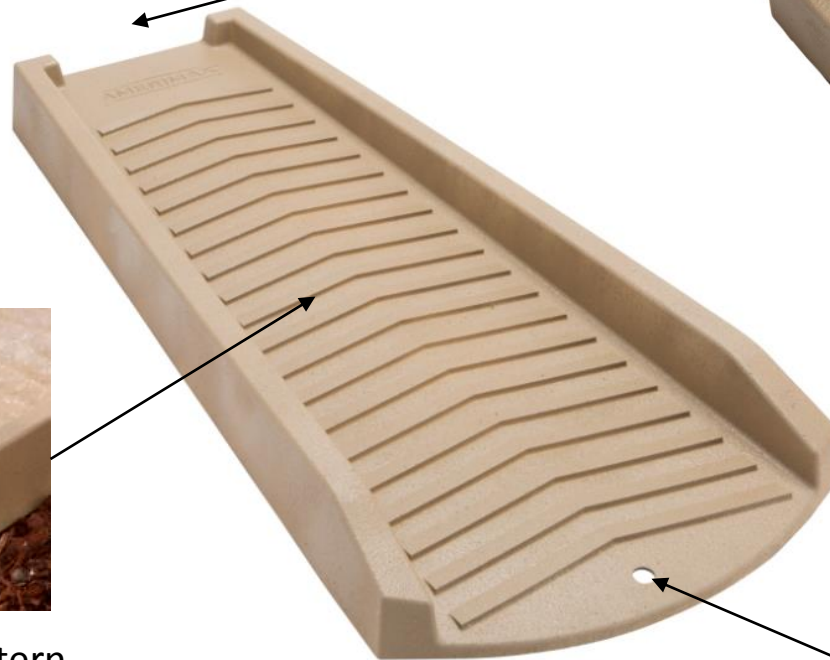

Hole for landscape spike at front of splashblock allows it to be secured to ground



AMERIMAX

amerimax.com | 800-347-2586

info@amerimax.com